

OPERATIONAL & MAINTENANCE MANUAL

WEIR USA INC.

WC-YS HYDRAULIC ACTUATOR



CONTACT NOW 24/7

toll free 1.866.462.1910

info@weirusa.com

www.weirusa.com



 www.weirusa.com
SCAN ME 

Version 4.0

Head Office:



7596 Wagner RD NW
Edmonton, Alberta CANADA T6E 5B2
info@weirusa.com /
www.weirusa.com

1.866.462.1910 Toll Free
780.462.1910 ph | 780.462.1959 fax

DOMESTIC PRODUCTS MADE IN NORTH AMERICA

Details are the difference between ordinary and EXCELLENCE

1. Summary

This manual covers Operation, Maintenance and Troubleshooting and for WCM Electro- Hydraulic Operator.

2. Technical & Application Data

Temperature range: -40°C to +93°C.

Operating Media (YS Actuator): UNVIS HVI 13 or equivalent Hydraulic Fluid.

3. Handling and Lifting

NOTE: Only trained and experienced personnel should handle the pump. The use of PPE (protective clothing, gloves, and eyewear) should always be used when performing any installation or maintenance.

3.1 Lifting Recommendations

3.1.1 Use industry standard practices as it pertains to suitability rated lifting devices, slings and chains that are safe for use.

3.1.2 Do not lift the actuator and valve combination using the actuator lifting lugs only.

3.2 Lifting Instructions

3.2.1 Prior to lifting the actuator remove electrical power and hydraulic lines to ensure that the actuator is fully depressurized and powered down.

3.2.2 Use only main lifting lugs.

3.2.3 Actuator must remain horizontal with the load balanced.

4. Installation on the Valve

4.1 Actuator to be installed on valve directly using the actuator housing flange or more commonly using a mounting bracket and coupling with applicable fasteners.

4.2 Actuator is supplied in the fail position (for single-acting). Install the valve in the correct position per the actuator fail position. Check the position of the actuator using position indicator on actuator body or limit switch (if applicable).

CALL US TODAY 24 hours a day, 7 days a week

4.3 Ensure the mounting faces and all connection surfaces on the valve and actuator are clean and free of any debris.

4.4 Grease the coupling stem, bore and valve stem to facilitate assembly.

4.5 Lift the actuator according to handling and lifting instruction (Section 3).

4.6 Whenever possible, install with valve stem in a vertical position.

4.7 Do not exert additional force while installing the coupling or actuator onto the valve.

4.1 Wiring Connection

4.1.1. Connect power as indicated in drawings shown in Figure 1 and 2 (Page 6 & 7).

4.1.2. Connect wiring from Control wiring to PLC (if applicable) shown in Figure 1 and 2 (Page 6 & 7).

5. Electro-Hydraulic Unit Operation

5.1 Control Panel

5.1.1 For Auto operation, ensure the 3 Way switch on panel is set to “Auto”. When Pipeline pressure switch/transmitter is satisfied, the pump will turn on and run until limit switch position is satisfied. If there is leak down or temperature swings, the pump will turn on to maintain ESD open.

5.1.2 Actuator to Fail Close upon loss of power.

5.1.3 Local control can be completed using the ESD & 3-way switch on the actuator panel.

Example Actuator Panel



CALL US TODAY 24 hours a day, 7 days a week

5.2 Speed Control

Open/Close speed can be adjusted using the hydraulic speed control valve.

Example hydraulic speed control



5.3 Manual Override

Turn the 3 Way valve located next to the manual pump handle (opposite side of panel of electro-hydraulic unit) to manual position and use pump handle to pump actuator to open position.

CALL US TODAY 24 hours a day, 7 days a week

Manual Override Handle and Valve



CALL US TODAY 24 hours a day, 7 days a week

6. Actuator Operation and Maintenance

6.1 Stroke Adjustment

The stroke adjustment is available from 80° to 100° of travel by adjusting the open and close position bolts as per below:


Loosen Nut on the open/close bolt

Adjust as needed:

Loosen = Increase travel

Tighten = Decrease Travel

Tighten Nut on the open/close bolt to set the position

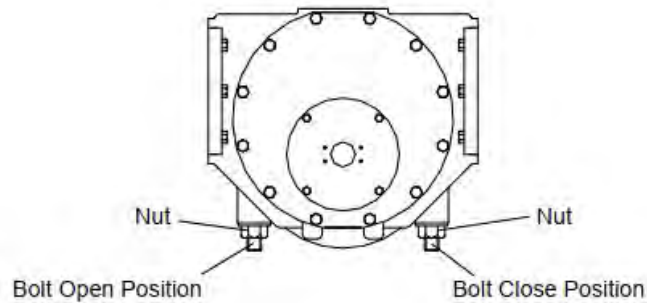

6.2. Removal from Valve

6.2.2 Eliminate electrical power supply and Hydraulic supply.

6.2.3 Release all pressure from controls and remove supply piping/wiring.

6.2.4 Prepare actuator for lifting following guidelines in Section 3.

6.2.5 Remove all mounting fasteners.

6.2.6 Lift and remove actuator from valve.

NOTE: BEFORE DISASSEMBLING OR SERVICING ANY PUMP COMPONENTS ENSURE THE SYSTEM IS FULLY DEPRESSURIZED.

CALL US TODAY 24 hours a day, 7 days a week

6.3 Maintenance/Repair

Regular maintenance should be performed as typical maintenance intervals or as required. Autumn months are preferable as this will drain any condensation that may have accumulated in the reservoir.

1. Empty the fluid reservoir of any accumulated moisture.
2. Check filter element(s). Clean and/or replace as necessary.
3. Check set points on pressure relief valve(s). Reset valves if required.
4. Check the operation and calibration of the pressure pilot or optional solenoid.
5. Top up with UNVIS HVI 13 or equivalent hydraulic fluid.


Please contact Weir Concepts' tech support if you have any questions or concerns.

10. Troubleshooting

Issue	Possible Cause(s)	Corrective Action
Actuator not functioning	Insufficient supply pressure	Ensure supply pressure is sufficient as per catalog to cycle actuator.
	Loss of power	Ensure power is live at source and at solenoid/positioner.
	Mechanical function of valve or actuator	If both supply pressure and control power are <u>sufficient</u> consult <u>valve</u> manufacturer and Weir Concepts service to perform further troubleshooting.
Valve not fully stroking	Stops incorrectly set	Re-adjust stops as outlined in Section 8
	Lack of supply pressure	Ensure supply pressure is sufficient as per catalog to cycle actuator.
	Valve blocked or unable to fully stroke	Consult valve manufacturer
Valve Leakage	Stops incorrectly set	Re-adjust stops as outlined in Section 8
	Valve seat or seal issues	Consult valve manufacturer
Actuator Leakage	Worn Seals	Contact Weir Concepts
	<u>Loose</u> or improper connections	Ensure all supply fitting connections are sufficiently tight and correctly sealed
Actuator Cycle Time too fast/slow	Incorrect supply pressure	Ensure supply pressure is correct for application as per catalog info.
	Controls adjustment required	Ensure any regulators, speed controls, etc. are adjusted correctly to achieve desired open/closing times.

CALL US TODAY 24 hours a day, 7 days a week

Figure 1

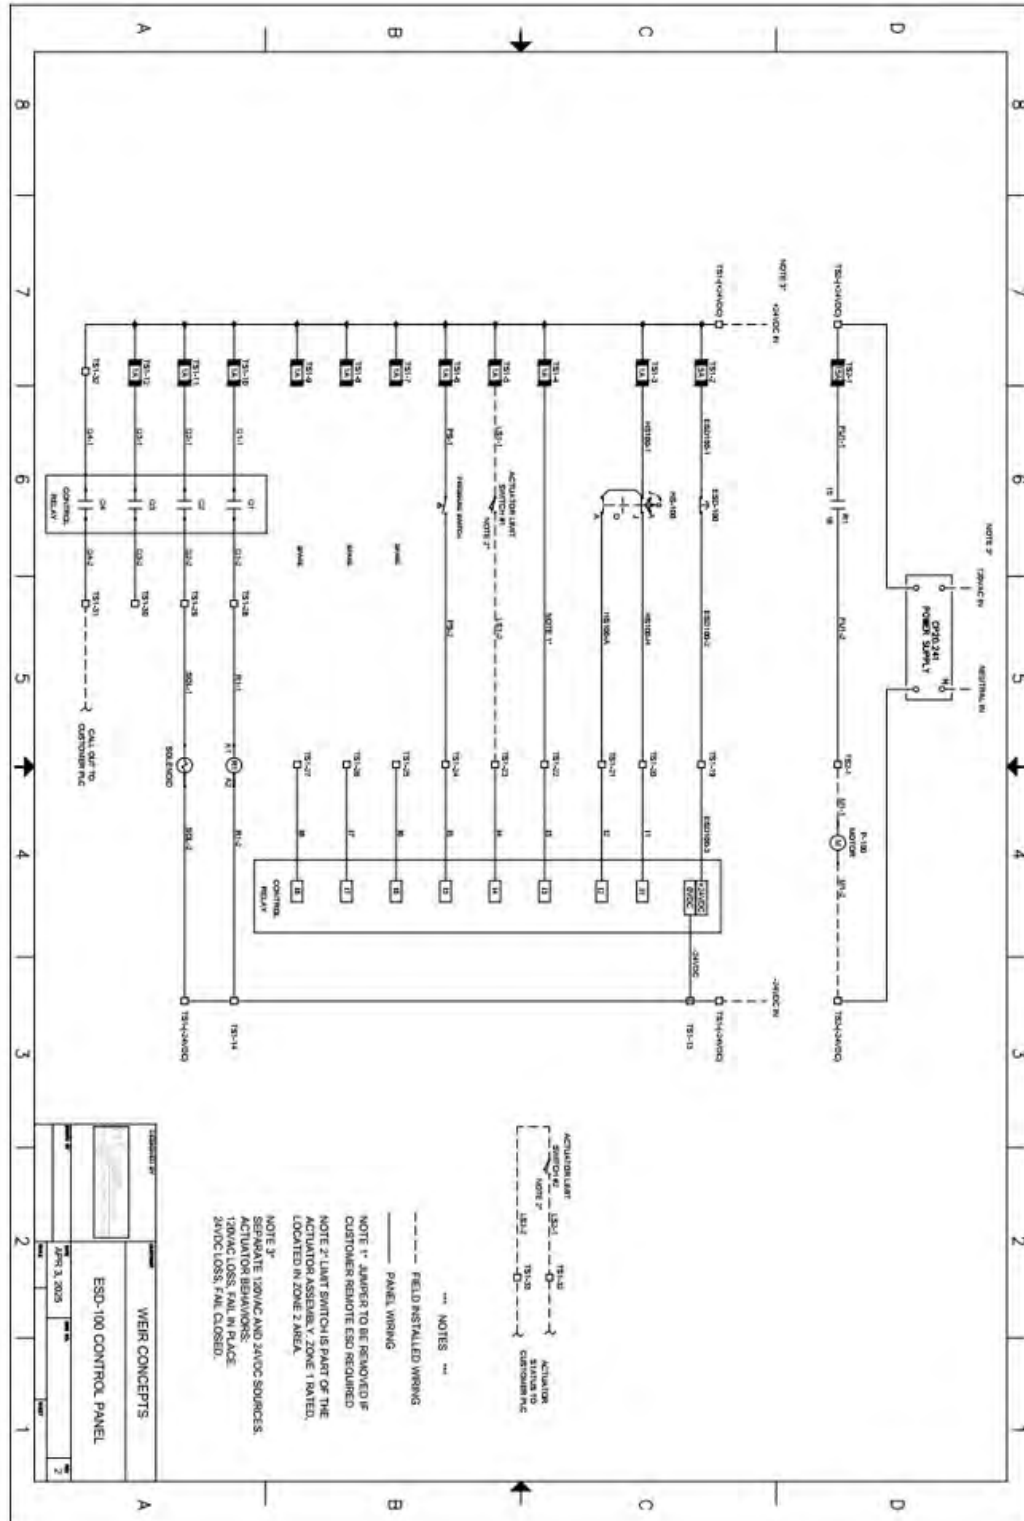

CALL US TODAY 24 hours a day, 7 days a week

[illegible]

OPERATIONAL & MAINTENANCE MANUAL

WCM7970 HIGH-LOW PRESSURE PILOT



On Site
Help Desk
#WEIRHERE

CONTACT NOW 24/7

toll free 1.866.462.1910

info@weirusa.com

www.weirusa.com

Technical Library



SCAN ME 

www.weirusa.com

Version 4.0

SOLUTIONS FOR YOUR COMPANY NEEDS - **WORLD WIDE SHIPPING**



- HELP DESK -

FOR YOUR SUPPORT AND SERVICE

24 hours a day, 7 days a week

NO CHARGE ON CALLS SERVICE

We offer technical assistance, product
knowledge, and reliable trouble shooting

Brochures/Maintenance info available online www.weirusa.com



Head Office:

7596 Wagner RD NW

Edmonton, Alberta CANADA T6E 5B2

info@weirusa.com / www.weirusa.com

1.866.462.1910 Toll Free

780.462.1910 ph | 780.462.1959 fax